



■ Permeability vs Frequency Curves


MPP

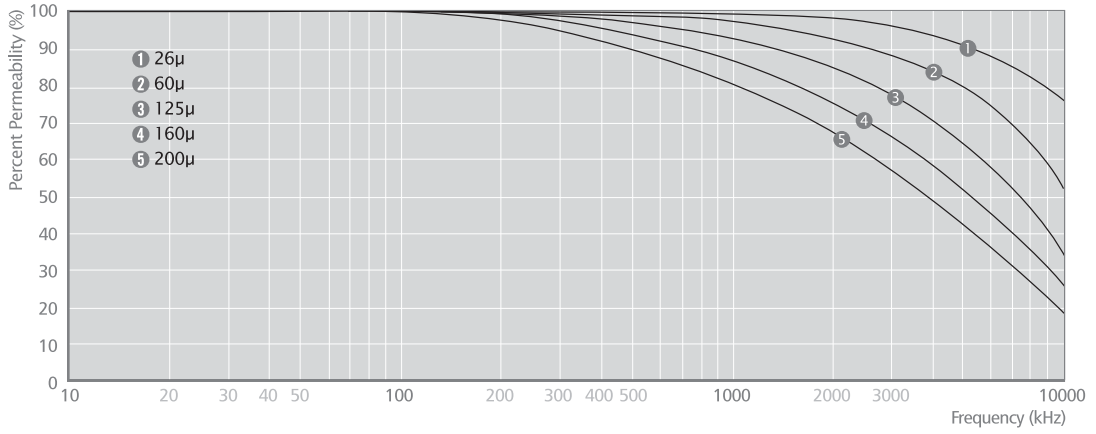

High Flux

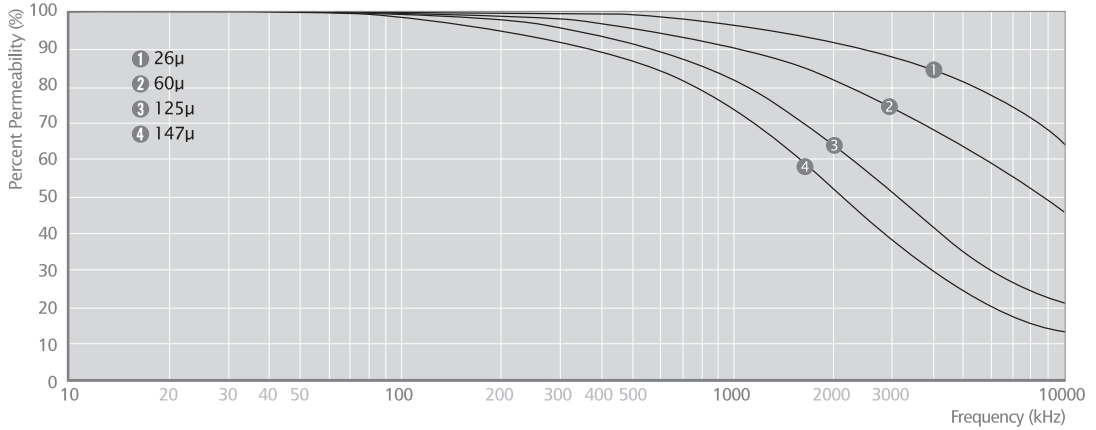

Sendust

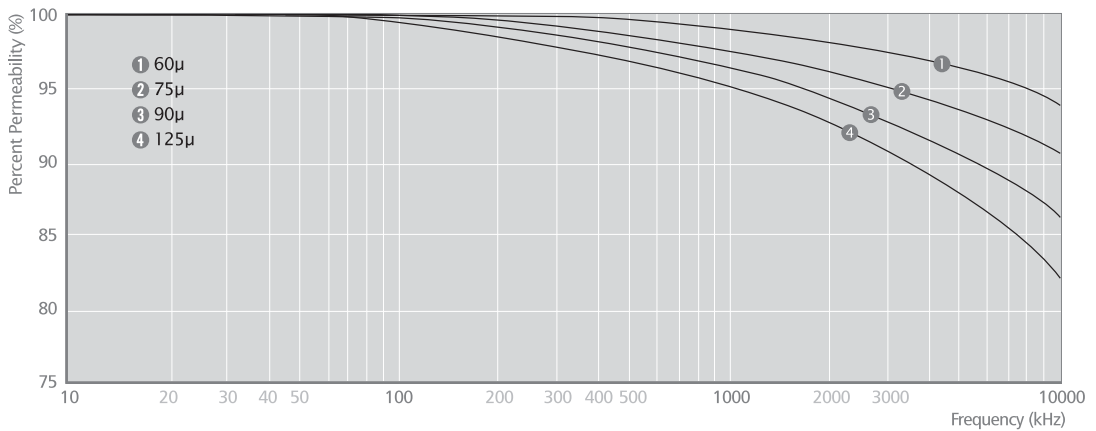

Mega Flux®

